

**For using with Canon camera model EOS 1DX and 7DM2.**

Before Binding setting, please follow the technical setting on Commander Air 1 user's manual/ Appendix 1.


**For Sony** - Before using Commander Air 1, please install Air 1 on camera and change the Flash mode to "WL" in camera menu.

## ⚠ Binding before use.


### Setting

Step 1: All the units are OFF



Step 2: Binding setting

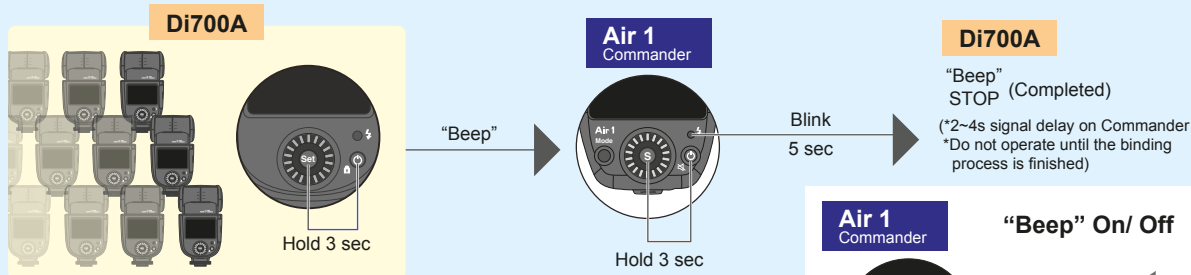


Step 3: Channel setting

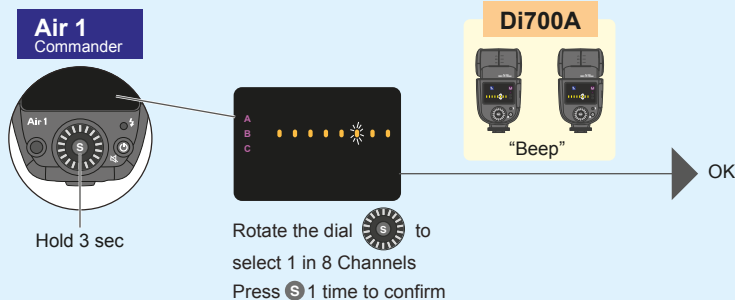

Step 4: Desire group setting

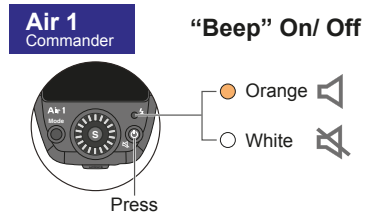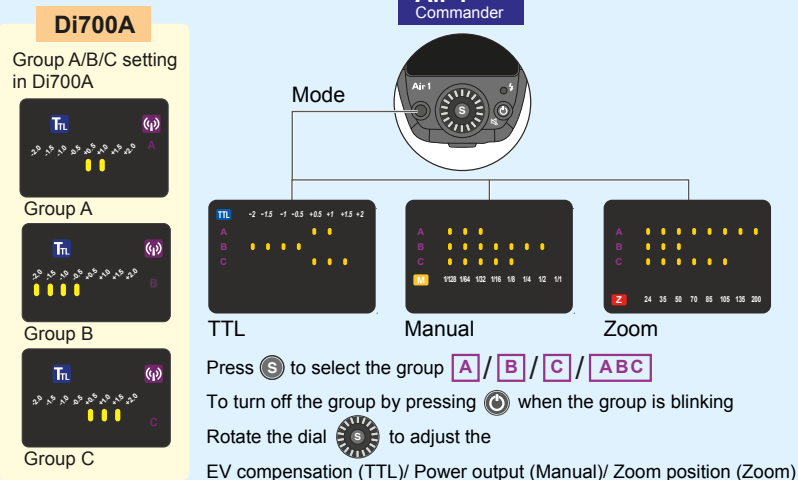

### Nomenclature

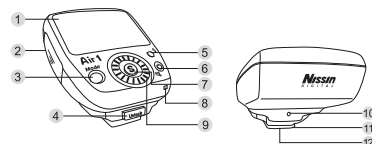

- 1 LED panel
- 2 Battery compartment door
- 3 Flash mode button
- 4 Unlock button
- 5 Pilot button (Test flash button)
- 6 On/ Off switch (Sound On/ Off button)
- 7 Select/ Set button
- 8 Strap hole
- 9 Select dial
- 10 AF-assis light
- 11 Mounting foot
- 12 Hotshoe contacts

### Commander unit

- The binding setting is memorized and remains unchanged when power on/ off.
- The Air 1 and Di700A display screen automatically turns off in about 2 minutes after the setting job is terminated.
- For a test-flash, press the pilot button.
- Press the Mode button for 5 seconds, all the setting will be reseted to the factory default.
- To turn off the Commander unit manually, press the on/ off switch and hold it for 1 second.

### For Sony Only

- High-speed synchronization is controlled by Air 1. To enable/ disable on Air 1:
- Press and hold Pilot button in 3 seconds
  - Pilot button starts blinking twice.