


POWER ON/ OFF

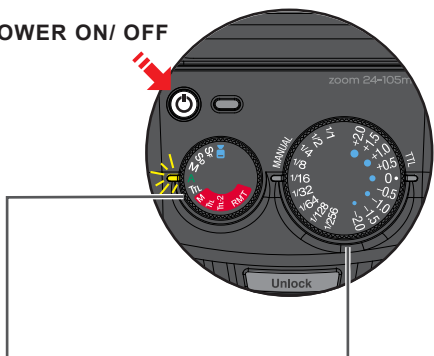


Mode

Power Dial



Video light

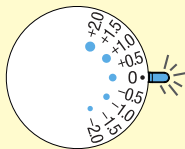

S_F


Slave Film

S_D

Slave Digital

M

Manual

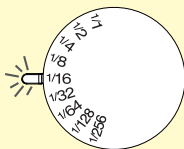


A

Auto

Auto control

TTL

TTL

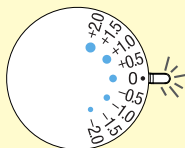


RMT

Wireless
RMT - M
RMT - TTL
RMT2 - TTL


Auto control

Nomenclature

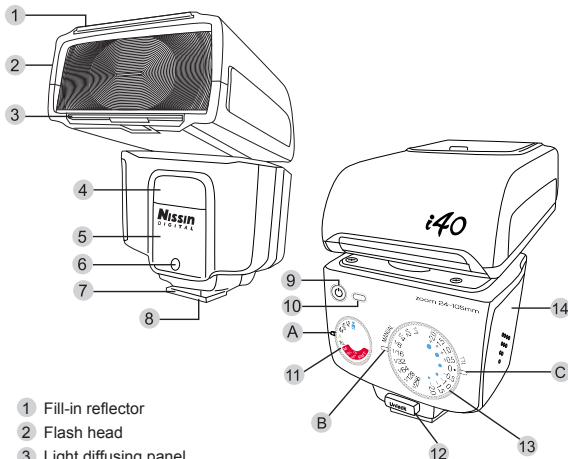

- 1 Fill-in reflector
 - 2 Flash head
 - 3 Light diffusing panel
 - 4 Video light
 - 5 Remote/ Slave sensor
 - 6 AF-assist light
 - 7 Mounting foot
 - 8 Hotshoe contacts
 - 9 On/ Off switch
 - 10 Pilot button (Test flash button)
 - 11 Function dial
 - 12 Release button
 - 13 Power dial
 - 14 Battery compartment door
- A Indicator lamp A
B Indicator lamp B
C Indicator lamp C

Accessories:

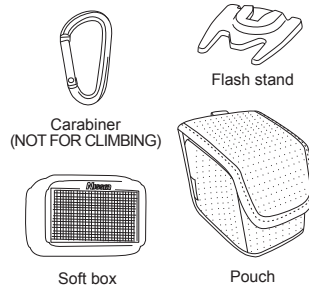

Turn on the flash unit

- Press the on/ off switch. Indicator lamp A is on.
- The pilot button turns red showing the unit is charging.
- In a few seconds, the pilot button turns green.
- The flash sleep mode turns off in about 2 minutes (in A/ TTL/ M mode) or about 5 minutes (in SD/ SF/ Wireless TTL Slave mode) after the setting job is terminated.
- For a test-flash, press the pilot button.
- The power is automatically turned off in about 60 minutes, when the flash is not in use.

HSS High-speed synchronization

- HSS High-speed synchronization in A/ M/ TTL mode
- Press and hold the Pilot button in 3 seconds.
 - Indicator lamp A starts blinking.

