


POWER ON/ OFF

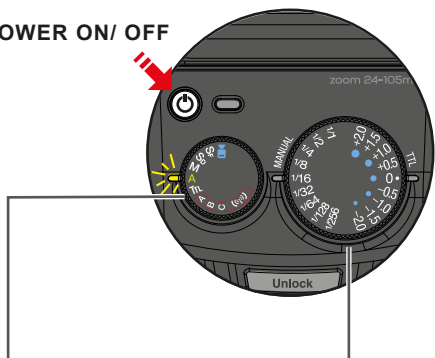


Mode

Power Dial



Video light

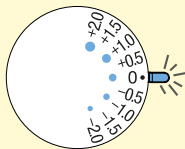

S_F


Slave Film

S_D

Slave Digital

M

Manual

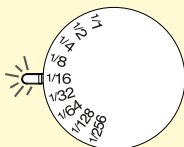


A

Auto

Auto control

T_{TL}


TTL

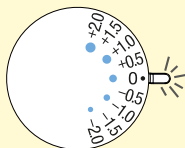

Wireless TTL
(Group A/ B/ C)

Auto control

Nomenclature

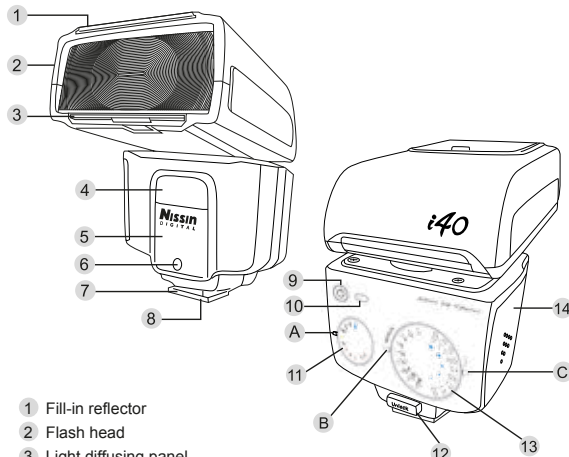

- 1 Fill-in reflector
- 2 Flash head
- 3 Light diffusing panel
- 4 Video light
- 5 Remote/ Slave sensor
- 6 AF-assist light
- 7 Mounting foot
- 8 Hotshoe contacts
- 9 On/ Off switch
- 10 Pilot button (Test flash button)
- 11 Function dial
- 12 Release button
- 13 Power dial
- 14 Battery compartment door

Accessories:




Carabiner
(NOT FOR CLIMBING)



Flash stand



Soft box

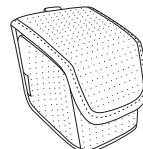

Pouch

Turn on the flash unit

- Press the on/ off switch. Indicator lamp A is on.
- The pilot button turns red showing the unit is charging.
- In a few seconds, the pilot button turns green.
- The flash sleep mode turns off in about 2 minutes (in A/ TTL/ M mode) or about 5 minutes (in SD/ SF/ Wireless TTL Slave mode) after the setting job is terminated.
- For a test-flash, press the pilot button.
- The power is automatically tuned off in about 60 minutes, when the flash is not in use.

For Four Thirds only

FP High-speed synchronization in A/ M/ TTL mode

- Press and hold the Pilot button in 3 seconds.
- Indicator lamp A starts blinking.

